

## Components and Hardware:

1.



2.



3.



4.




## Components and Hardware:

- 1. Soft Top Struts ..... (2)
- 2. Brackets..... (2)
- 3. Short Ball Stud with washers ..... (2)
- 4. Long Ball Stud with washers..... (2)

## Soft Top Struts, Bronco

1. The Soft Top Strut will be installed using the original hole position on the vehicle.


Locate the factory hole on the frame.

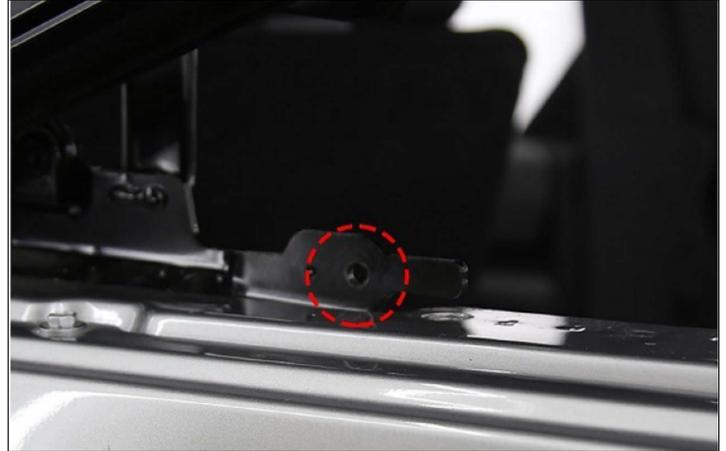

2. Install the supplied long ball stud and washers. Ensure the ball is pointing to the inside of the vehicle. Tighten hardware. Repeat on the other side.



3. Remove the OE bolt from the frame but do not remove the OE bolt from the strap as this will ensure correct orientation when reinstalling the OE bolt.

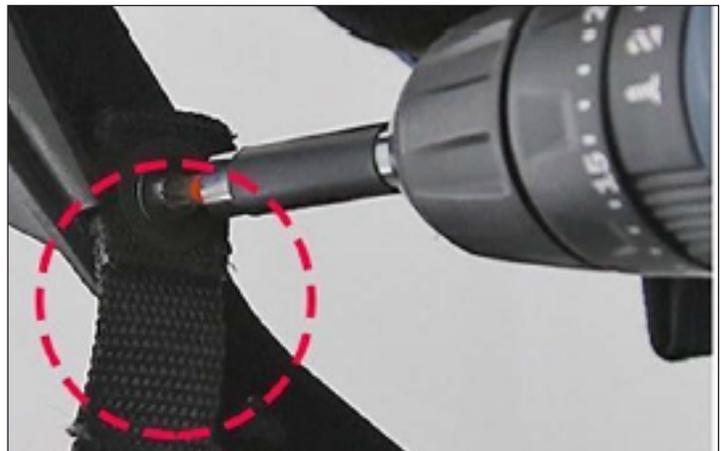

## Soft Top Struts, Bronco

4. Place the mount in position and secure with the OE bolt and strap in the same orientation as it was when removed. Repeat steps 3 and 4 on the other side.



5. Install the supplied short ball stud and washers as shown at the top. Repeat on the other side.



## Soft Top Struts, Bronco

6. With the top open, install the thin end of the Soft Top Strut to the base of the frame first. With assistance lifting the top, install the thick end of the Strut to the top ball stud. Repeat on the other side.

