



PUTCO
HORNETTM
AMBER LED STEALTH ROOFTOP STROBE LIGHT BAR

INSTRUCTION GUIDE

ADAPTER PLATE

These instructions are to be used in conjunction with the Hornet Light Bracket instructions. These instructions detail parts and tips specific to mounting the 24" Standard Hornet Light to the Hornet Light Bracket.



Congratulations on your purchase of a high quality PUTCO® product. Should you need any application or technical assistance, feel free to call us at:

1-800-247-3974

Monday-Friday 8:00am - 5:00pm (Central Standard Time)
Contact your PUTCO® dealer for other quality accessories.



PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION AND CHECK TO SEE THAT ALL PARTS ARE INCLUDED

REQUIRED TOOLS

ALLEN WRENCH
(size: 1/8")



WRENCH
(size: 3/8")



CONTENT LIST

QTY

Adapter Plate

1

10-32 Bolt

4

10-32 Nylock Nut

4



- 1** Install the 24" adapter plate onto the Hornet light bracket using the 10-32 nuts and bolts included with the Hornet light.
- 2** Using the 10-32 nuts and bolts included with the adapter plate, install the 24" Hornet Light to the now combined Hornet bracket and Hornet adapter plate. This process is detailed in **Figure 1**.

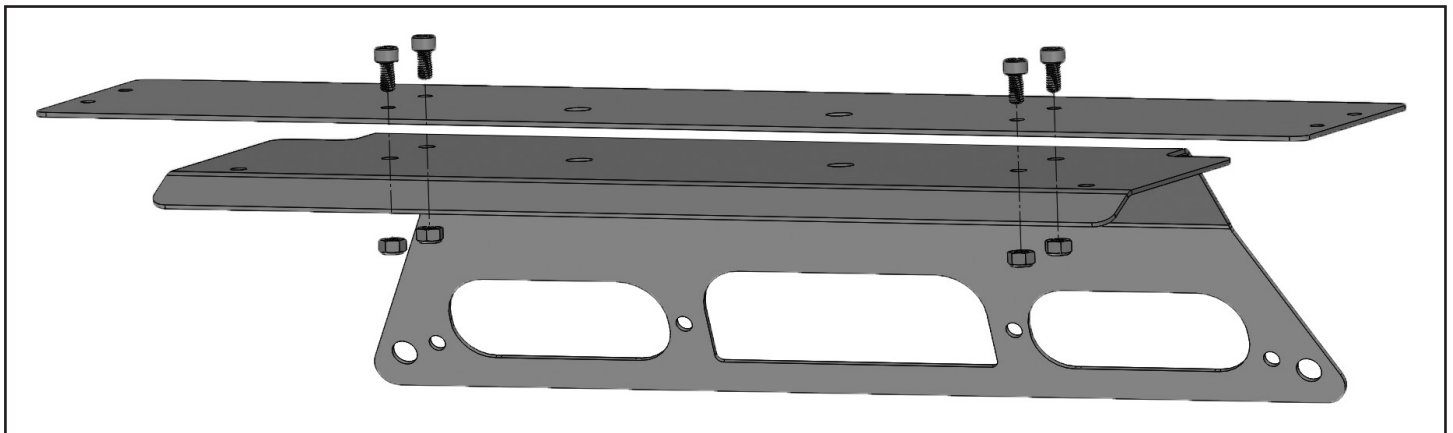


Figure 1: Bracket and clamp.

- 3** Proceed to the next step in the Hornet bracket instructions.

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.